

# Chopper

HS-3501/HS-3501A  
220-240V 50/60Hz  
350W

Instruction manual



Keep the Instruction for further use.

## **The intended use of the device**

The device is intended solely for the chopping of soft and semi-hard foods (eg nuts, spices, herbs, pulses and fruits, cheese, meat, etc.) and/or for the mixing of liquid foods and small pieces of ice, which is determined by the technical and operating parameters and functions of the equipment, the safety and user instructions and the external influences of the operating environment.

The device is not intended for grinding too hard food (eg coffee beans) or crushing ice.

### **1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS**

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the generic term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
  - household electric appliances,
  - information and communication equipment,
  - consumer electronics,
  - lighting equipment,
  - electrical and electronic tools,
  - toys and equipment for sporting and recreational

#### **1.1 General safety instructions**

- Before commissioning the unit, we recommend that you carefully read the operating instructions and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that can not be incorporated into any of the products is responsibility and caution. These factors must therefore be ensured by users / users who use and operate this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Make sure that the appliance is complete and shows no signs of damage before using the appliance for the first time. If the product is defective or if it has any visible damage, do not use the product.
- Keep the operating instructions as close to the device as possible throughout its service life. Always keep the operating instructions together with the appliance for future use and use by new users.
- Use the appliance only for the purpose for which it is intended and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use, with no special focus.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

## 1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment.
- Always keep the operating environment clean and well lit.
- Do not place the device on an unstable surface. Overriding or dropping the device may result in personal injury or damage to the device.
- Do not expose the unit to direct sunlight or excessive heat sources.
- Do not use an electric appliance in areas with flammable liquids, gases or dust. The appliance may be the source of scaling, which can result in the ignition of dust or vapors.

### Features of the operating environment

1. Ambient temperature: +5 - +40 ° C
  2. Humidity: 5 % - 85%
  3. Altitude: ≤ 2 000 m
  4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
  5. Occurrence of foreign bodies: amount and type of dust are not significant
- Protection class: IP20
- Other characteristics of the operating environment (mechanical stress - shocks and vibrations, occurrence of plant, animals, weather effects) are negligible in terms of effect on the correct and safe use of electrical equipment.

## 1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electrical appliance is designed for mains supply 220 V-240V ~.  
The electrical safety of the appliance is guaranteed only if it is properly connected to the electricity grid.
- Only use a power cord with a plug (mains lead) that came with the device and compatible with a wall outlet. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible power outlet. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- Do not pull the power cord / power cord by pulling on the cord / cord. Disconnect the power cord by pulling the plug behind the power cord / power cord plug.
- If you use an extension cord, check that the total rated (ampere) power of all devices connected to the extension cord does not exceed the maximum current rating of the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power outlet, and not to another extension cord or power supply. Extension power cord or power supply block must be designed for grounded plugs and plugged into a grounded outlet.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged sockets.
- To avoid electrical shock, plug the power cables into properly grounded electrical outlets. If the device is equipped with a 3-pin power supply cord, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord / power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- If the power cord is damaged, disconnect the appliance from the mains and do not use it again. If the power cord / power cord is damaged, it must be replaced by the manufacturer, its service department, or a qualified person to avoid the risk of electric shock.

- Regularly check and maintain the electrical appliance as well as the power cable. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock. If the power cord is wet or the appliance gets water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power supply before attempting to disconnect the power supply. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

#### **1.4 Safety of persons**

- This appliance is intended for use by persons without an electrotechnical qualification (layperson) according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children 8 years of age and older and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge only when under the supervision or guidance of the responsible person have been instructed to use the appliance in a safe way and understand the potential hazards .
- Cleaning and user maintenance can be carried out by children 8 years of age and older only under the supervision of the responsible person.
- Children may not play with the appliance.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance. Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus. Inattention during operation may result in serious injury.

#### **1.5 Cleaning, maintenance and repairs**

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Do not disassemble the appliance. The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the power supply. In the event of a fault, please have the repair serviced by an authorized service center.
- Only guarantee qualified and qualified personnel to repair and repair the electrical appliance.

## **2. Special Safety Instructions. Read carefully!**

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures taken by the manufacturer to ensure safe use and handling , it carries with it some residual risks and associated potential hazards.

- To warn of possible hazards, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove protective covers on the device. Failure to observe the safety instructions during use and operation of the device may result in:

Danger of electric shock! Danger of serious injury or life threatening!



This symbol alerts users to the following: • Risk of serious injury or life threatening when not following the safety instructions when using and operating the unit!

Danger of damage to equipment or other damage to property!



This symbol warns users that if you fail to follow the safety instructions when using and operating your device, you may: Danger of cutting or pinching your fingers!



This symbol means that the product is made with a double insulation between hazardous live parts (parts with dangerous voltage from the mains) and parts that are accessible in normal use.

#### **Transport / Carriage**

- When transporting and using, for example, of the transport cart, be careful when moving, to avoid overturning the device and damaging it.
- Transport / carry the equipment only after thorough inspection of the space and the routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is plugged into a wall outlet.
- Transfer the device firmly to the bottom edge of the base (container) and hold the other parts of the body.
- Make sure that your hands and equipment are not damp or slippery when carrying.

There is a risk of serious injury or life threatening! There is a risk of damage to the device!

#### **Unpacking / Packaging**

- Unpack the equipment and accessories before putting it into service and remove all parts of packaging material and labels. Store the packaging in a safe place, especially out of the reach of children and unaccompanied persons, or dispose of them safely.

There is a risk of serious injury! Risk of suffocation!

#### **Check / Startup**

- The appliance is designed for food preparation. Therefore, thoroughly clean all parts before commissioning, following the instructions in the „Startup“ section. „Cleaning and maintenance“.

- Never clean the appliance (its drive unit with electrical parts and controls) and the power cord with the plug in a way (under running water) that could cause the liquid to flow into the device.
- Clean these parts with a damp cloth only and wipe dry or let it dry.
- Only clean the appliance if it is switched off and disconnected from the mains.
- We recommend performing both initial and subsequent regular machine inspections.
- Never use the appliance if it is incomplete, damaged or damaged in any way during transportation or use.
- Do not use non-original and incomplete parts of the device and its accessories.

There is a risk of serious injury! There is a risk of electric shock!

**Location / Installation**

- Only place the appliance on straight, strong and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- Always make sure that the place you want to place the device has enough space, mechanical strength, stability and appropriate lighting.

**Warning!**

- Do not use or dispose of the appliance: - to unstable tables or parts of furniture, - on an uneven and dirty surface, - on the sealing edge of tables or parts of furniture, - in the vicinity of containers with water or other liquids.
- Do not expose the device to:
  - direct sunlight, sources and equipment producing heat,
  - vibration and mechanical stress,
  - excessive dust,
  - water and excess moisture,
  - insect,
  - an aggressive external environment.
- Do not cover the appliance in part. Do not add anything to the device. Do not insert or allow the foreign bodies to enter the holes of the device covers.
- Do not cover the openings of the airflow covers. Air ventilation ensures reliable and safe operation of the device.

There is a risk of electric shock!  
There is a danger of fire!

**Warning!**

- Place the device in a place where children can not reach freely.
- Prevent children from playing with the device. The device may overwhelm children and cause serious injury.
- Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.

There is a risk of serious injury!  
There is a risk of damage to equipment or other property damage!

- Do not place or use the appliance near water-containing containers. If the appliance falls into the water, do not remove it! First, pull the power cord plug out of the mains socket and then select the appliance from the water. In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.

There is a risk of electric shock!

There is a risk of electrical short circuit!

### **Operation / Supervision**

#### **Warning!**

- This device must only be used with original parts and accessories.
- Always make sure that the device is properly assembled and that none of its parts is damaged before using the device. Do not use incorrectly assembled and damaged devices.
- Always use the appliance with a properly fitted container lid. Only the properly fitted lid (with the drive unit) will enable the safety switch to be switched on, the device switched on and its safe operation.
- Always switch off the device and unplug the power cord from the wall outlet before replacing accessories or accessible parts of the device, before installing and dismantling, or before cleaning and servicing.  
There is a risk of serious injury!
- If the device has been stored at lower temperatures, first acclimate it (about ½ and 1 hour) before further use to remove any moisture inside the enclosure, solidify the moving parts and preserve the mechanical strength of the plastic parts.
- Always keep your device under control during use and operation!
- This device is not intended to be operated via a programmer, an external time switch or a remote control, as there is a risk of fire when the device is covered or incorrectly positioned.
- Always unplug it from the power supply if you leave it unattended.
- Before each connection of the appliance to the mains power supply, make sure that the controller (main switch on/ off switch) is set to Off.
- Do not switch the device on or off by plugging in or pulling out the power cord from the AC outlet.
- Always connect the appliance to mains power supply for normal use, then turn on the main power switch.
- When you have finished using the appliance, turn off the main switch and then pull the mains cord out of the mains socket.
- Do not use the device if the main power switch does not work.
- The device is under dangerous voltage when the power supply is connected.  
There is a risk of serious injury!
- The machine contains sharp-edged rotating parts - cutting blades.

#### **Warning!**

- Cutting blades are very sharp. Do not touch the blades of the cutting blades. When handling and cleaning, grasp the cutting blades behind the plastic shaft. Be very careful.

#### **Warning!**

- Do not bend your fingers and do not place other objects in the work area - inside the container and the rotating parts when it is in operation.
- If the workspace needs to be handled (cleaning the rotating parts of the trapped food) - but only when the appliance is switched off, disconnected from the power supply and the rotating parts are completely stopped, use only the specified accessories of the appliance or a suitable item, plastic knife, plastic spoon . Do not use metal objects.

#### **Warning!**

- After switching off the drive, the drive of the rotating parts will recharge for a certain amount of time. Always wait until the rotating parts stop completely before handling the equipment or the container's workspace.

- There is a risk of serious injury! There is a risk of tearing/puncture!
- Do not connect the power cord to bundles. The power cord must remain accessible for safe disconnection of the device from the power supply.
  - Do not let the cord hang loose and do not allow it to be freely accessible and reachable by children.
  - Never leave your device freely accessible and do not leave it with a loose cord. Children could download the device for a network cord.
  - Do not store the appliance with a wrapped cord around your body. Unfold the network cord „in the way it was put in the original packaging by the manufacturer. There is a risk of serious injury!
  - Never overload the equipment beyond the limits specified by the technical specifications!
  - Do not switch on the appliance unless the container is filled with sufficient food / fluids. Do not switch on the appliance without the food being processed.
  - Do not exceed the maximum content / volume of processed foods indicated on the container or recommended in the Food Processor Information in this manual.
  - Allow the food to cool before processing the heat treated food. Do not process food with a temperature higher than 60 °C.
  - Before processing deep-frozen foods, allow food to thaw first to the temperature at which food can be divided into smaller (recommended) parts. Do not process excessive pieces of deep-frozen food.
  - Always divide the device into the recommended service intervals (continuous operation/break time) and follow these instructions.
  - If you notice any unusual occurrences (vibrations, sounds, odors, smoke, etc.) while using the device, switch off the device immediately and disconnect it from the power supply. Have the appliance checked by a specialist workshop.  
There is a risk of serious injury!
  - Only install and disassemble the device and its parts when the device is switched off and disconnected from mains power supply.  
There is a risk of damage to equipment or other property damage!
  - Carefully clean the appliance and accessories immediately after use and dispose of all residues of processed food.
  - Store the device in an upright position - especially its drive unit.
  - If any safety component / component (mechanical, electrical / electronic) is part of the device, never disable this part / component! If the safety component / component is damaged or not working, do not use the appliance!
  - Do not use safety parts / components to switch on / switch off the device.
  - Never underestimate the potential hazards and take extreme caution !!!
  - 
  - Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
  - This appliance is intended to be used in household and similar applications such as: – staff kitchen areas in shops, offices and other working environments; – farm houses; – by clients in hotels, motels and other residential type environments; – bed and breakfast type environments.
  - Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use



**Power supply:****Technical specifications****Power consumption:**

220-240V 50/60Hz

**Usable container capacity:**

350 W

approx. 1000 ml

**Weight:**

1.5 kg

**Dimensions (WxHxD):**

200X160X220 mm

**Noise level:**

80 dB (A)

The right to change is reserved!

### Characteristic properties

The device is designed to process different foods. Allows chopping and mixing.  
Made of quality and health-conscious materials.

### Before first use

Do not plug the appliance into the mains during preparation.  
Unpack and remove all packaging material from it. To remove any dirt that may have occurred during the packing process, clean the inside compartment, blades and cover with a dry cloth that does not release the fibers. When cleaning the sharp parts, be careful not to be injured. (See „Cleaning and maintenance“ in this manual).  
Rinse the accessories in lukewarm water. Do not immerse the engine body in water!  
Clean the surface with a cloth moistened with water. Dry all parts thoroughly.

**Never immerse the engine body in water or other fluid!**

**Only for home use!**

### Parts descriptions

**A** Press Button

 
**B** Engine Unit

**C** Cover

**D** Seal ring

**E** Chopping blade

**F** Glass chopping bowl

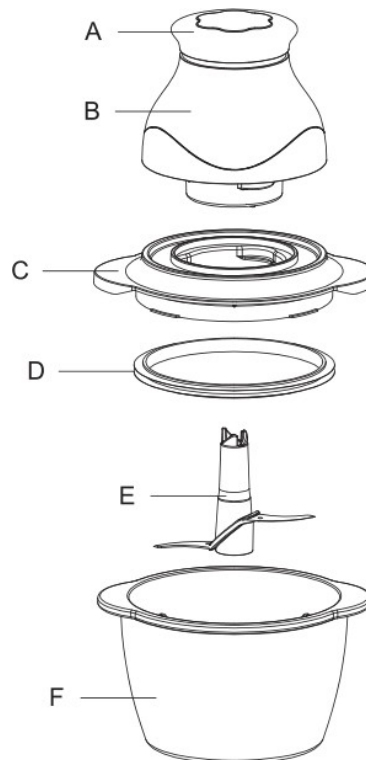

## **Assembly of accessories and use with the engine unit - Cutting into small pieces/Mixing / whipping**

Follow the steps below to attach the food processing and chopping machine.

1. Place the container (**F**) on a dry, level and firm surface.  
Do not plug the power cord into an electrical outlet before fully assembling the device!
2. Place the cutting blades (**E**) into the container (**F**). Beware of an accident, the knives are sharp!
3. If you want to cut with chopping knives, put only 1 cup of food in the container at a time. Remove the larger pieces of food before processing into approximately 2.5 cm of cube.  
Do not work more than 1 cup of food at a time!
4. Attach the seal ring(**D**) to the cover (**C**)
5. Place the cover (**C**) to the top of the container (**F**).
6. Attach the engine unit (**B**) to the assembled receptacle (**F**) so that the tabs on the lower part engage in the slots of the lid of the container
7. Connect the power cord to an electrical outlet.
8. Press and release the button (**A**) controls as necessary until you reach the desired chopping of the food.
9. After completing the work, disconnect the power cord from the electrical outlet and fold the engine unit (**B**). When opening, firmly grip the container (**F**) with one hand and remove the container cover (**C**) with the other hand.
10. When removing the food from the container (**F**), always first take out the blade (**E**). Handle the knives carefully. They are sharp!

Remove the food residues from the container and knives with a rubber blade

### **Tips for maximum blending**

If you mix solid foods, you must pre-cut the hard fruit and vegetables into pieces of about 1 cm before inserting into the container. Even softer food types should be pre-cut to smaller pieces before mixing. Increase efficiency of mixing. If you are preparing multiple ingredients, requiring mixes of different ingredients at different rates, mix the individual ingredients separately.

- For fruit / vegetable slicing, place the fruit / vegetables in a container of about 1 cup. Mix it continuously until you reach the desired consistency.
- For fruits / vegetables, add about 1 cup of liquid to 1 cup of fruit / vegetables to the hard fruit / vegetables. Add about 1/2 cup of liquid to 1 cup of fruit / vegetables to the soft fruit / vegetables.
- Avoid pre-mixing. Mix in a few seconds, not minutes. Premixing produces a mash consistency.
- Do not overfill the container.
- Fill the container with liquid first, then solids (unless the prescription prescribes otherwise).
- When mixing beverages, you can put all ingredients into the container at the same time.
- When mixing solid foods, cross the food to small pieces (about 1 cm) and add it to the dishonest.
- Add ice in one cube during mixing. After mixing, you can add another cube. When mixing, hold the container gently with your hand.
- Only mix ice when there is fluid in the container. Use cups of water.
- If the mixing stops during operation, turn off the unit and leave it for a while.

## More tips

### Chopping

Processed Food	Quantity per Dose
Chocolate	Max. 100 g
Cheese.	Max. 200 g
Pork	Max. 600 g
Tea or spice	50 ~ 100 g
Vegetables and fruits	100 ~ 300 g
Onions	Max. 500 g

#### Notes (Cutting):

- Do not use the appliance for a long time without breaks when cutting hard cheese or chocolate. Otherwise, the food will overheat and melt.
- Standard cutting interval: 5 seconds

### Preparation of creamy dishes

Processed Food	Quantity per Dose
Eggs	2 ~ 5 pcs (time: 30 ~ 70 seconds)
Soft cheese	125 ~ 350 ml (time: 20 seconds)

#### Notes:

- You can use the device to mix cheese and eggs and to quickly create mayonnaise or puddings.
- Do not use the device for kneading.

## Overview of food processing and recommended types of food

### Chopping

Fold the meat, vegetables and fruit first into smaller pieces (about 2 cm) and process them gradually.

Recommended foods: Cooked meat, poultry, apples, onions, cabbage, parsley, raw meat, tomatoes, carrot mushrooms.

### Blending

Put all food together in the container and mix.

Recommended foods: Sauces, salad dressings, soups, spreads.

### Complete mixing

Always feed the food first into smaller pieces (about 2 cm) and mix. Remove the food from the container with a squeegee.

Recommended foods: cooked meat, raw and cooked fish and poultry, fruits and vegetables, buttermilk, baby food.

### Cleaning and maintenance

Wash bowl, cover, knives in warm water with detergent, wipe and dry. Do not leave the parts wet.

Do not use solvents or abrasive cleaners to clean individual parts.

Wash the parts immediately after use so that no food residue is left on them. Wash the knives with a dishwashing brush. Do not put your hands under the water as they are very sharp.

Parts except the engine unit can be washed in the dishwasher. Never immerse the engine unit in water or other fluid!

Use a dry cloth for the drive unit and power cord. The engine is lubricated with a durable grease. It does not require deletion.

Never store additional parts with the covers attached. The cover prevents the odor from venting and thorough drying.

Note: The blades are very sharp. Handle them with care. Store them out of reach of children.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



The symbol on the product or on its packaging indicates that this product does not belong to household waste. It is necessary to take it to a collection point for electrical recycling and electronic equipment.

By ensuring proper disposal of this product, you will help prevent negative consequences to the environment and human health that would otherwise be caused by inappropriate disposal of this product. For more detailed information about recycling of this product, please contact your local authority, your household waste disposal service or the shop where you purchased the product.